

Compumotor

Model 52 User Guide

Compumotor Division
Parker Hannifin Corporation
p/n 88-005548-01 Y1



TABLE OF CONTENTS

PART I - OPERATIONS

| | |
|--|----|
| 1.1 Introduction | 1 |
| 1.2 This Manual | 1 |
| 1.3 Model 52 Description | 2 |
| 1.4 Quick Start | 4 |
| 1.5 Initialization | 4 |
| 1.5.1 INSPECTION | 5 |
| 1.5.2 POWER | 5 |
| 1.5.3 CONSOLE REQUIREMENTS | 5 |
| 1.5.4 OPENING COMMUNICATIONS | 6 |
| 1.5.5 GETTING STARTED | 6 |
| 1.6 Installation | 8 |
| 1.6.1 MOUNTING | 8 |
| 1.6.2 WIRING: POWER | 8 |
| 1.6.3 WIRING: SIGNALS | 9 |
| 1.7 Control | 10 |
| 1.7.1 TIMING | 12 |
| 1.7.2 ENCODER FEEDBACK FUNCTIONS | 12 |
| 1.7.3 FREQUENCY OUTPUT FUNCTIONS | 13 |
| 1.7.4 ANALOG I/O | 13 |
| 1.7.5 REMOTE SIGNAL CONDITIONING I/O | 14 |

PART II - HARDWARE REFERENCE

| | |
|---|----|
| 2.1 Specifications | 16 |
| 2.2 Screw Terminal Connections | 17 |
| 2.2.1 ISOLATED INPUTS - IN A through IN D | 17 |
| 2.2.2 ISOLATED OUTPUTS: "OUT A" through "OUT D" | 19 |
| 2.2.3 ISOLATED RESET INPUT: "RST+" and "RST-" | 19 |
| 2.2.4 ENCODER INPUTS: "CH A+" through "CH Z-" | 20 |
| 2.2.5 MOTOR OUTPUTS: "STEP+" through "DIR-" | 22 |
| 2.2.6 ANALOG OUTPUT and GND | 23 |
| 2.2.7 ANALOG INPUTS: "IN#1" through "IN#4" | 23 |
| 2.3 PARALLEL I/O Connections | 25 |
| 2.3.1 PARALLEL OUTPUTS | 25 |
| 2.3.2 PARALLEL INPUT | 27 |
| 2.4 RS-232 CONNECTIONS | 27 |
| 2.4.1 PRINTER PORT | 28 |
| 2.4.2 RS-232 USER PORTS | 29 |
| 2.5 GROUNDING | 29 |
| 2.6 Analog Input Details | 30 |
| 2.6.1 CONFIGURING ANALOG INPUTS | 30 |
| 2.6.2 ANALOG INPUT ACCURACY | 33 |

PART III - PROGRAMMING CONSIDERATIONS

| | |
|--|----|
| 3.1 MODEL 52 BASIC | 34 |
| 3.1.1 VARIABLES | 34 |
| 3.1.2 MANIPULATING CHARACTER STRINGS | 35 |
| 3.1.3 INSTRUCTION ANOMALIES | 36 |

| | | |
|-------|---|----|
| 3.1.4 | HARDWARE DEVICES | 38 |
| 3.2 | Program and Memory Manipulation | 39 |
| 3.2.1 | GENERATING AND EDITING PROGRAMS | 39 |
| 3.2.2 | SAVING PROGRAMS | 40 |
| 3.2.3 | RECALLING PROGRAMS | 41 |
| 3.2.4 | AUTOMATIC OPERATIONS | 42 |
| 3.2.5 | ACCESSING MEMORY | 43 |
| 3.3 | Input/Output Programming Fundamentals | 45 |
| 3.3.1 | BASIC I/O READ AND WRITE INSTRUCTIONS | 46 |
| 3.3.2 | BITS, BYTES, AND DISCRETE I/O LOGIC | 46 |
| 3.3.3 | SETTING BITS: THE LOGIC "OR" FUNCTION | 48 |
| 3.3.4 | CLEARING BITS: THE LOGIC "AND" FUNCTION | 48 |
| 3.3.5 | INVERTING: THE "XOR" LOGIC FUNCTION | 49 |
| 3.3.6 | READING INPUTS | 49 |
| 3.3.7 | INPUT DECISIONS | 49 |

PART IV - PROGRAMMING

| | | |
|--------|---------------------------------------|----|
| 4.1 | I/O Devices | 51 |
| 4.1.1 | ANALOG INPUT | 51 |
| 4.1.2 | ANALOG OUTPUT | 52 |
| 4.1.3 | PARALLEL OUTPUTS | 52 |
| 4.1.4 | PARALLEL INPUTS | 54 |
| 4.1.5 | MULTIFUNCTION DEVICES | 55 |
| 4.1.6 | FREQUENCY OUTPUT AND MOTOR CONTROL | 59 |
| 4.2 | Custom BASIC Instructions | 60 |
| 4.2.1 | ANLG: THE ANALOG I/O INSTRUCTION | 62 |
| 4.2.2 | DIO: THE DISCRETE I/O INSTRUCTION | 63 |
| 4.2.3 | SCAN: THE I/O LOGIC INSTRUCTION | 66 |
| 4.2.4 | CTR: THE COUNTER/TIMER INSTRUCTION | 67 |
| 4.2.5 | QUAD: THE ENCODER INSTRUCTION | 70 |
| 4.2.6 | COM: THE RS-232 SETUP INSTRUCTION | 71 |
| 4.2.7 | RCV: THE RS-232 RECEIVE INSTRUCTION | 73 |
| 4.2.8 | XMT: THE RS-232 TRANSMIT INSTRUCTION | 76 |
| 4.2.9 | THE STR INSTRUCTION | 78 |
| 4.2.10 | THE VAL INSTRUCTION | 79 |
| 4.2.11 | THE LOAD INSTRUCTION | 81 |
| 4.2.12 | THE SAVE INSTRUCTION | 81 |
| 4.3 | Interrupts | 82 |
| 4.3.1 | AUTOMATIC INTERRUPT SYSTEM | 83 |
| 4.3.2 | REAL TIME CLOCK: THE ONTIME INTERRUPT | 84 |
| 4.3.3 | OTHER BASIC INTERRUPTS | 85 |
| 4.3.4 | ENABLING DISCRETE INPUT INTERRUPTS | 86 |
| 4.3.5 | BASIC INTERRUPTS | 86 |
| 4.3.6 | DISABLING INTERRUPTS | 90 |
| 4.4 | Machine Language Routines | 91 |
| 4.4.1 | CALL 0: INITIALIZE | 93 |
| 4.4.2 | CALL 1: PASS INTERRUPT CODE | 93 |
| 4.4.3 | CALL 2: DISABLE ALL INTERRUPTS | 94 |
| 4.4.4 | CALL 3: SET ANALOG INPUT RANGE | 94 |
| 4.4.5 | CALL 4, 6, and 8: PARALLEL BCD INPUT | 95 |
| 4.4.6 | CALL 5, 7, and 9: PARALLEL BCD OUTPUT | 95 |

| | | |
|--------|---|-----|
| 4.4.7 | CALL 10: ISOLATED BCD INPUT | 97 |
| 4.4.8 | CALL 11: ISOLATED BCD OUTPUT | 97 |
| 4.4.9 | CALL 12: PARALLEL BINARY INPUT | 98 |
| 4.4.10 | CALL 13: PARALLEL BINARY OUTPUT | 98 |
| 4.4.11 | CALL 14: INVERT PARALLEL INPUTS | 99 |
| 4.4.12 | CALL 15: INVERT PARALLEL OUTPUTS | 99 |
| 4.4.13 | CALL 16: CONFIGURE 16 PARALLEL OUTPUTS | 99 |
| 4.4.14 | CALL 17: CONFIGURE 24 PARALLEL OUTPUTS | 100 |
| 4.4.15 | CALL 18: CONVERT 16 BIT BINARY | 100 |
| 4.4.16 | CALL 19: CONVERT 32 BIT BINARY | 100 |
| 4.4.17 | CALL 20: CONVERT A BINARY POSITION REPORT | 100 |
| 4.4.18 | CALL 21: ENABLE CH Z INTERRUPT | 101 |
| 4.4.19 | CALL 22: DISABLE CH Z INTERRUPT | 101 |
| 4.4.20 | CALL 23: ENABLE IN D INTERRUPT | 101 |
| 4.4.21 | CALL 24: DISABLE IN D INTERRUPT | 101 |
| 4.4.22 | CALL 31: RECEIVE BUFFER 0 SIZE | 102 |
| 4.4.23 | CALL 32: RECEIVE BUFFER 1 SIZE | 102 |
| 4.4.24 | CALL 49: REPORT REVISION LEVEL | 102 |
| 4.4.25 | CALL 127: PURGE EEPROM | 102 |

PART V - SAMPLE PROGRAMS

| | | |
|-------|---|-----|
| 5.1 | Discrete and Timed Analog I/O Control Program | 103 |
| 5.1.1 | PROGRAM DESCRIPTION | 103 |
| 5.1.2 | I/O DESCRIPTION | 104 |
| 5.1.3 | PROGRAM LISTING | 105 |
| 5.1.4 | USE OF THE SCAN INSTRUCTION | 106 |
| 5.2 | Sample Parts Counting and Motor Control Program | 107 |
| 5.2.1 | PROGRAM DESCRIPTION | 108 |
| 5.2.2 | I/O DESCRIPTION | 109 |
| 5.2.3 | PROGRAM LISTING | 109 |
| 5.3 | The Directory Program | 112 |
| 5.4 | The Test and Demonstration Program | 114 |
| 5.4.1 | PROGRAM DESCRIPTION | 114 |
| 5.4.2 | PROGRAM LISTING | 117 |
| 5.5 | The CX/372/2100 Control Program | 131 |

| | | |
|-------------|--------------------------|-----|
| APPENDIX A: | PARALLEL I/O CONNECTIONS | 137 |
|-------------|--------------------------|-----|

| | | |
|-------------|----------------|-----|
| APPENDIX B: | THE MEMORY MAP | 138 |
|-------------|----------------|-----|

| | | |
|-------------|--|-----|
| APPENDIX C: | SAMPLE I/O CONNECTIONS | 141 |
| C-1 | SIGNAL CONDITIONING CIRCUIT | 141 |
| C-2 | OPTICALLY ISOLATED INPUT CIRCUIT | 142 |
| C-3 | OPTICALLY ISOLATED OUTPUT CIRCUIT | 143 |
| C-4 | OPTICALLY ISOLATED MULTIPLEXED THUMBWHEEL SWITCHES | 144 |
| C-5 | DRIVING A SPEAKER WITH THE STEP OUTPUT | 145 |
| C-6 | DRIVING A TRANSLATOR WITH THE STEP OUTPUT | 146 |

| | | |
|-------------|---------------------|-----|
| APPENDIX D: | DIMENSIONAL DRAWING | D-1 |
|-------------|---------------------|-----|

| | | |
|-------------|--------------------------|-----|
| APPENDIX E: | CIRCUIT ASSEMBLY DRAWING | E-1 |
|-------------|--------------------------|-----|